


SPI Serial Output Expander

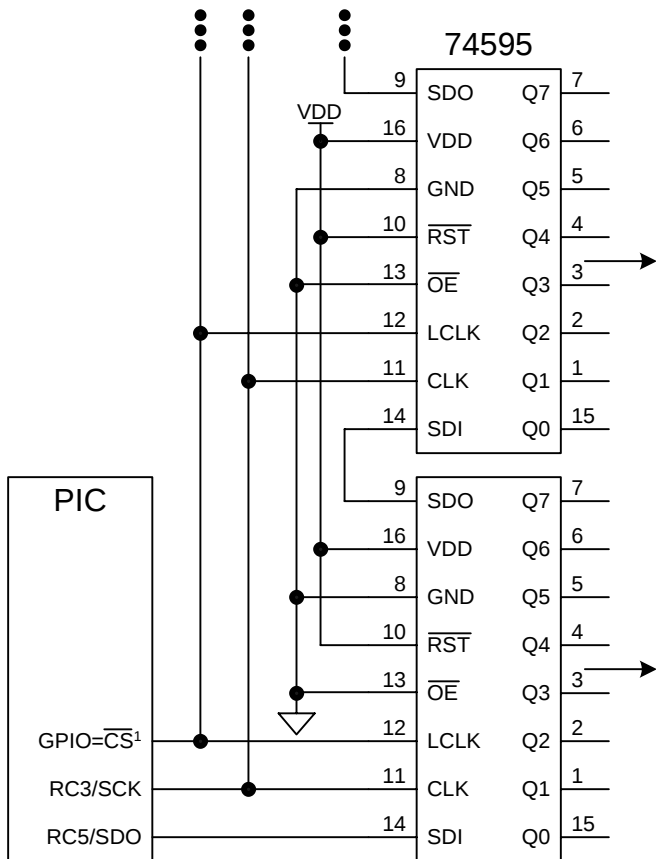

Notes:

1. Data sent to devices appears on Q outputs after low to high transition of this pin.
2. Setup SPI using [setup_spi(SPI_MASTER|SPI_h_TO_l|SPI_CLK_DIV_4);]