


# Assigning user power symbols and names to be recognized as power nets by ARES

2: Click on the Property Assignment ICON

3: Enter "TYPE=POWER" in the box as shown

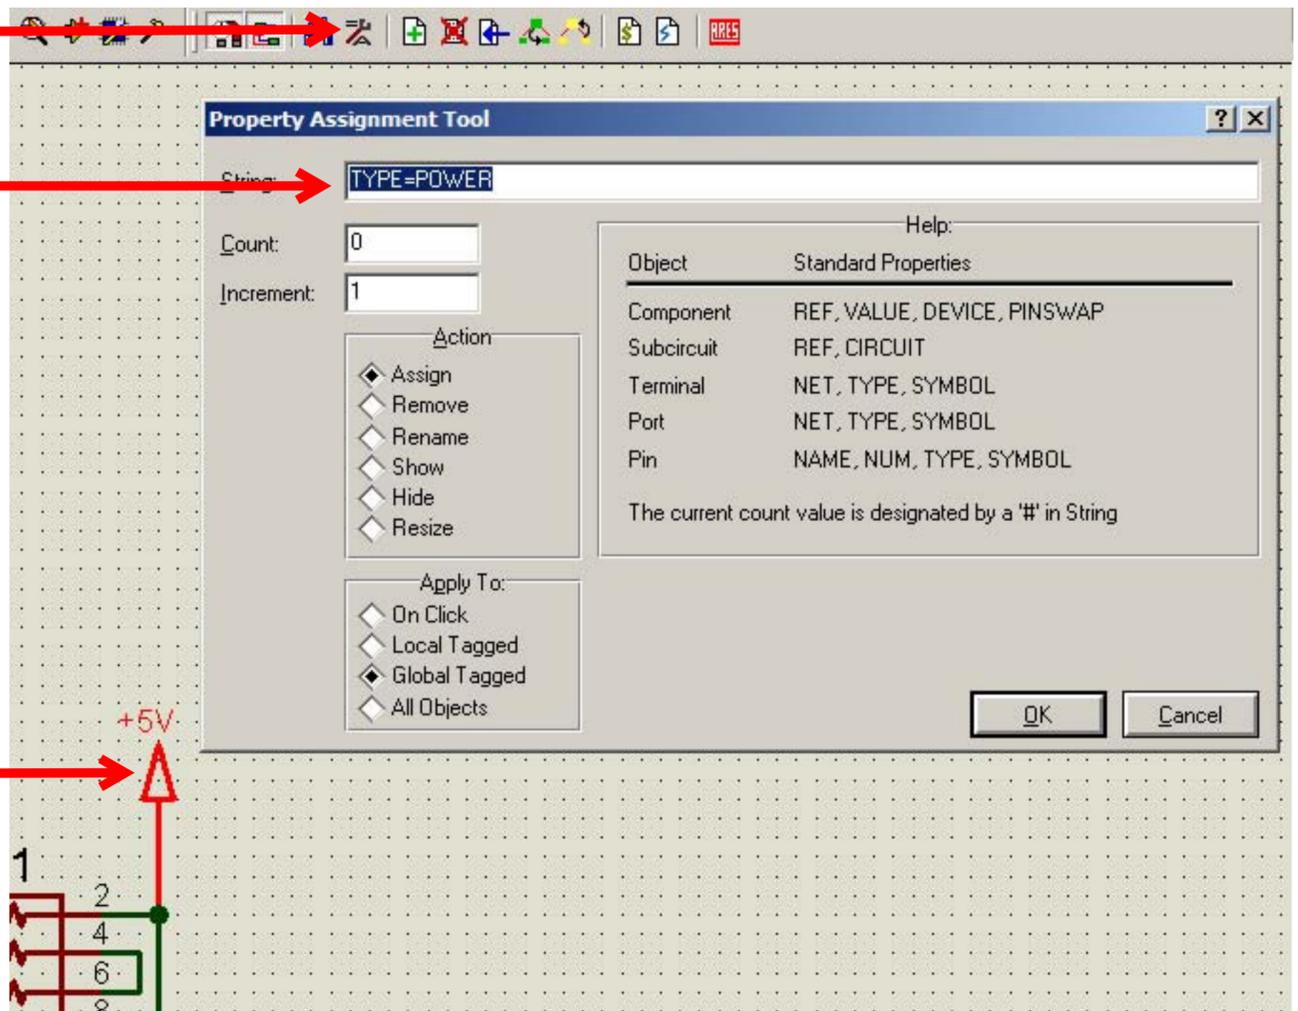


1: Highlight one or a group of power symbols (They don't need to all be the same!)


4: From the design menu, select "Configure Power Rails"

5: Select the rail to configure from the drop down list

(If this is checked, step 6 is not required!)

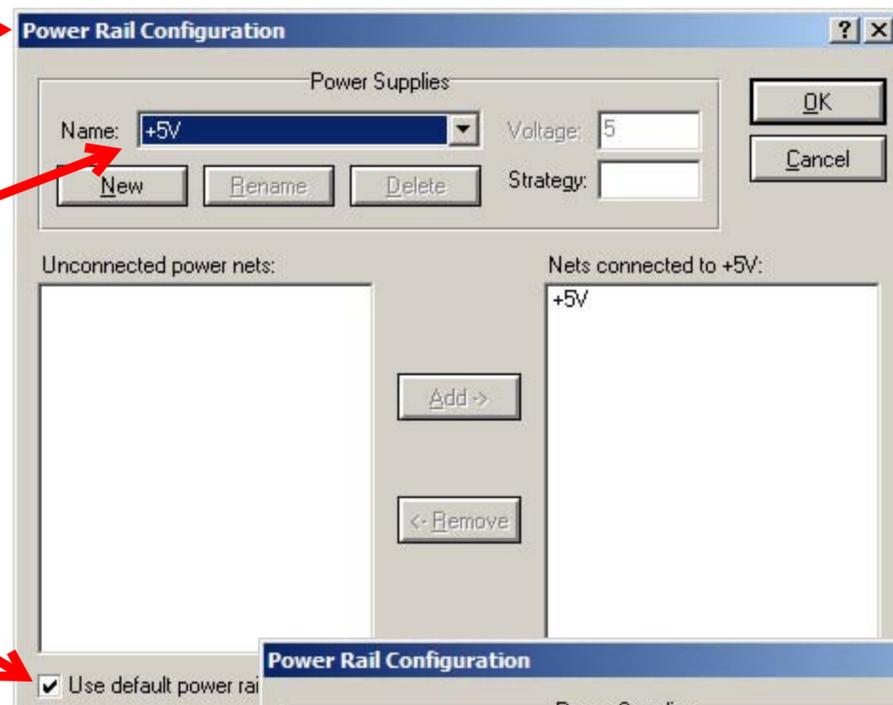

6: Type "POWER" in the "Strategy" box

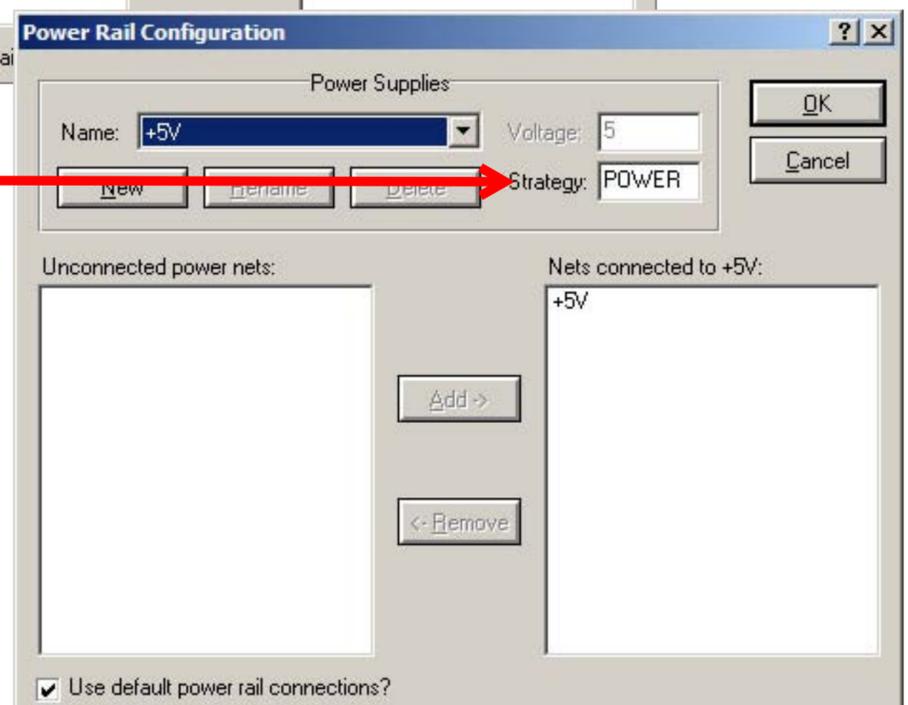

From this point on, ANY terminal with the name "+5V" will be connected to this power rail. In ARES, power and signal nets may be displayed with different colors and treated with different routing rules (Strategies).